




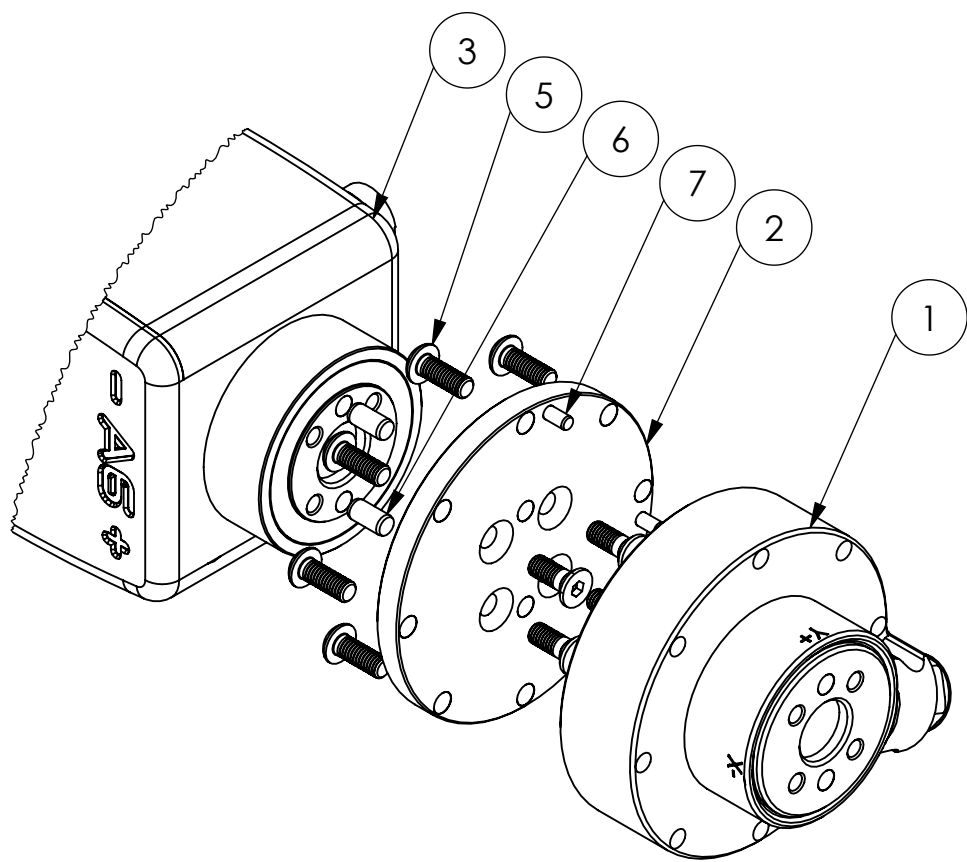


DETAIL A (1 : 1)

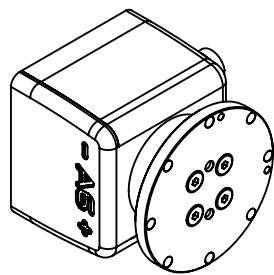

STEP 1

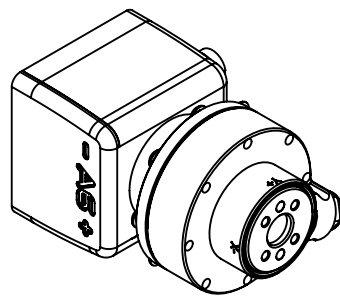


STEP 2

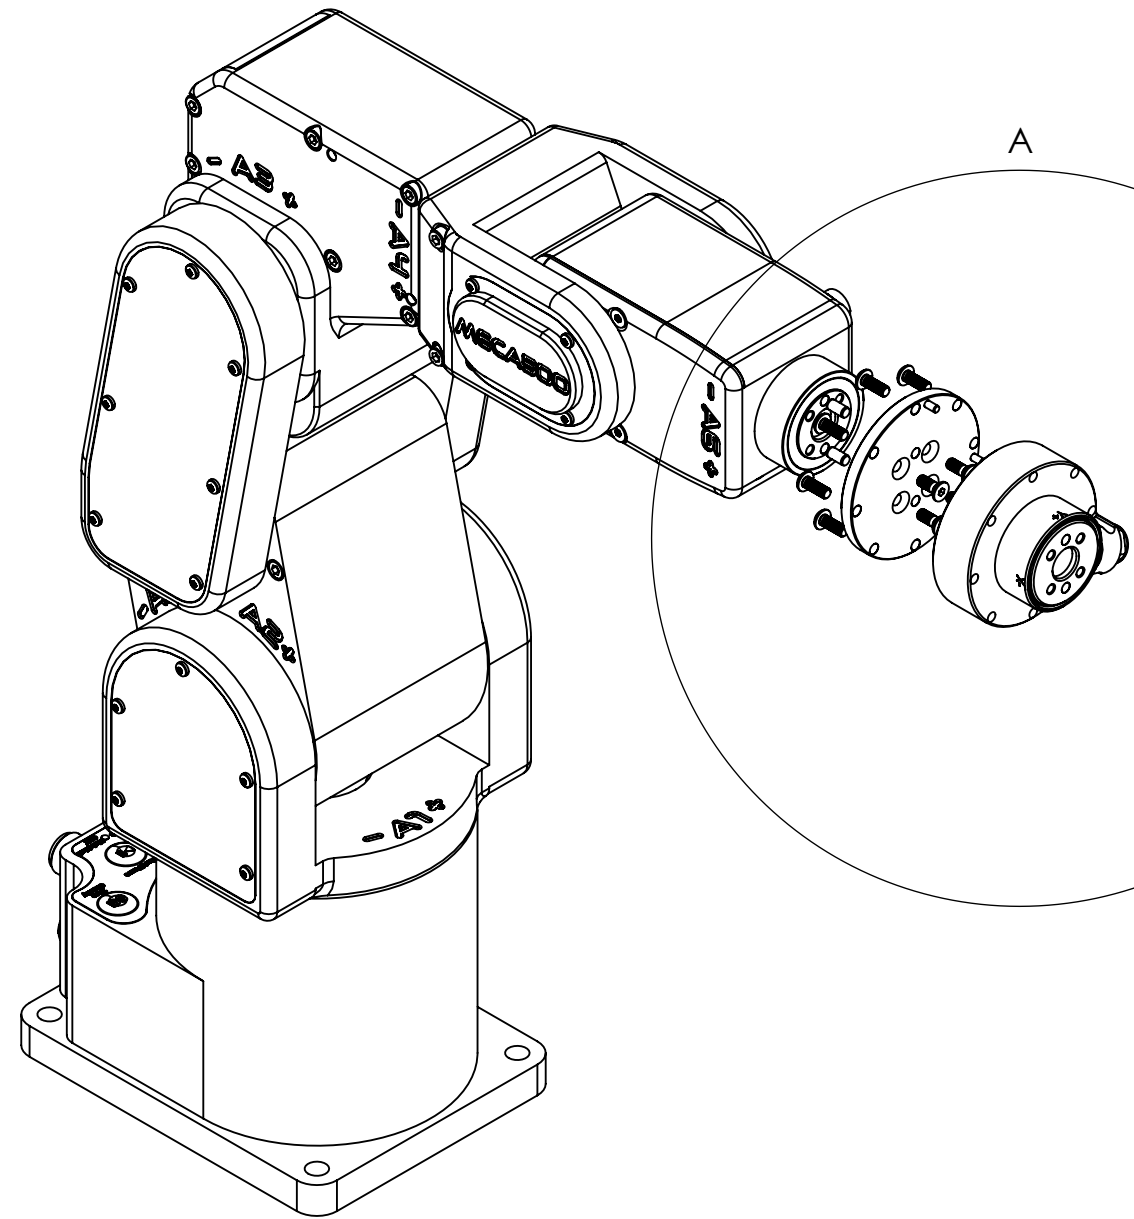

ITEM NO.	NUMBER	QTY.	IN KIT
1	BFT-MIPS-ECAT-CG	1	
2	RAW-ROKS-MECA	1	✓
3	MECA-500	1	
4	ISO-10642-M3x8-8-10.9-BL	4	✓
5	ISO-7380-M3x8-8-10.9-BL	8	✓
6	ISO-8734-3x6-m6-S-HR	2	✓
7	ISO-8734-2x6-m6-S-HR	2	✓

NOTES

- SHIFT IN Z-AXIS AFTER SENSOR MOUNTING IS 30.2 MILLIMETERS.

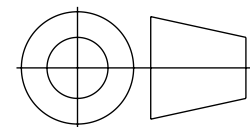

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN MILLIMETERS
SURFACE Ra: 1.6
GENERAL TOLERANCES:
DIN ISO 2768 (m)
BREAK SHARP EDGES

FINISH:



Hagenholzstrasse 85, 8050, Zurich, Switzerland
Email: info@botasys.com
Website: www.botasys.com
©2023 BOTA Systems AG. All rights reserved.

	NAME	DATE	MODEL DESCRIPTION			
DRAWN	EE	05/05/2022	Adapters for Rokubi side to Meca500 and mounting flange			
CHECKED	EE	16/05/2023	MODEL NUMBER	DRAWING NUMBER	MODEL REVISION	DRAWING REVISION
APPROVED	EE	16/05/2023	ACC-ROKS-MECA	ROK-A003	A	A
WEIGHT	MATERIAL		SCALE: 1:2	PAGE: 1 / 1	A3	